



Model 7A
540 Dia., .030 Wall, Medium Taper (MT), 15 1/4" Long



Model 5A
540 Dia., .030 Wall, Medium Taper (MT), 16" Long



Model 5B
595 Dia., .030 Wall, Long Taper (LT), 16" Long



Model 5B LTD
595 Dia., .035 Wall, Long Taper (LT), 16" Long



5B Rock
595 Dia., .035 Wall, Short Taper (ST), 16" Long



2B
595 Dia., .035 Wall, Long Taper (LT), 16" Long



Rock
595 Dia., .035 Wall, Short Taper (ST), 16 1/4" Long



Joey 1
540 Dia., .030 Wall, Medium Taper (MT), 15 1/4" Long



Matt "Spug" McDonough
540 Dia., .030 Wall, Medium Taper (MT), 15 1/4" Long



Lars Ulrich
595 Dia., .035 Wall, Long Taper (LT), 16 1/2" Long



Rick Allen
595 Dia., .035 Wall, Long Taper (LT), 16 1/2" Long



Tommy Lee
595 Dia., .035 Wall, Long Taper (LT), Studio - 16 1/2" Long, Concert - 17" Long



Tico Torres
595 Dia., .035 Wall, Long Taper (LT), 16 3/4" Long



Maxum Studio
595 Dia., .035 Wall, Long Taper (LT), Studio - 16 1/4" Long



XL Rock Studio (Shown)
620 Dia., .0375 Wall, Super Short Taper (SST), 16 1/4" Long



XL Rock Concert
16.750" Long

Marching Series

M1 - 695 Dia., .040 Wall, Short Taper (MST) 16 1/4" Long
M2 - 695 Dia., .040 Wall, Long Taper (MLT) 16 3/4" Long
M3 - 695 Dia., .040 Wall, Long Taper (MLT) 17" Long



Ahead drumming gloves feature "hotspot" pads for longer life.



Ahead Stick bags keep equipment organized.



Super high impact nylon tips come in different shapes (including mallet heads) to fit every style of play.



Ahead grip tape offers the best feel and durability.

AHEAD OFFERS A VARIETY OF HIGH PERFORMANCE ACCESSORIES DESIGNED FOR TODAY'S DRUMMERS

Joey ①

Lars Ulrich

Fab Moretti

Tico Torres

Tommy Lee

Matt "Spug" McDonough

Phill Rudd

ADVANTAGE AHEAD

THE ULTIMATE IN FEEL • POWER • PERFORMANCE

TEAM AHEAD ARTISTS

- Tommy LeeTS, TC, GL, GT
- Lars UlrichLU, GT
- Joey JordisonJJ1, GL, GT
- Mick Fleetwood.....5B, GT
- Matt "Spug" McDonough .S7A, GL, GT
- Phil Rudd5A, RK, GT
- Rick AllenRA, GL, GT
- Fab MorettiRK, GT
- Jim Keltner5A, 5B, GL, GT
- Scott Rockenfield5BR, GT
- Tico TorresTT, GL, GT
- James KottakRK, GT
- Robin Goodridge5B, GL, GT
- Charlie Morgan5B, GL, GT
- Johnny KellyTS, GL, GT
- Mugs Cain5B, GT
- Franky Waddy5B, GL, GT
- Trey Gray2B, 5A, GT
- Peter Tornell5A, GT
- Peter CrissPC3, GL, GT
- Steve West2B, GL, GT
- Kenny AronoffGL, GT
- Otis Hayes III5A, 5B, GT
- Tommy ClufetosRK, GT
- Mitch Marine5B, GT
- Frank ZummoRK, GT
- Mike DupkeLU, GT
- Ben GravesLU, GL, GT

RA = Rick Allen
 TT = Tico Torres
 LU = Lars Ulrich
 PC3 = Peter Criss
 S7A = Spug 7A
 GT = Grip Tape
 RK = Rock Sticks
 TS = Tommy Lee Studio
 TC = Tommy Lee Concert
 MS = Maxum Studio
 GL = Gloves

//////AHEAD™ DRUMSTICKS

THE ULTIMATE IN FEEL
POWER • PERFORMANCE



PRODUCT LINE

AHEAD

Simply the World's Most Advanced Drumstick

Care, Maintenance & Warranty Information


The following is information on how to care for and maintain AHEAD (Advance High Efficiency Alloy Drumstick) drumsticks.

I. AHEAD SCREW-ON TIPS

The screw-on tip design of the AHEAD allows for easy cover replacement and tip style variations. Made from super high impact Zytel nylon, the standard tips sound like wood and are shatterproof. For those who prefer a brighter sound, the SAT, Ball, 5AS, MBT and 5AB tips made from nylon 66 are also available.

To remove AHEAD tip:

1. Wrap a piece of paper around tip to protect it (i.e. business card), clamp the tip with a pair of pliers and turn drumstick handle counterclockwise until tip loosens.
2. Replace tip by screwing it back down until it is flush with replacement cover. Do not over tighten tip.
3. For extremely hard playing, some drummers add a drop of super-type glue to the threads after screwing tip on 1/2 way, then tighten immediately.

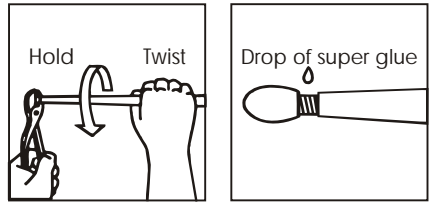

II. AHEAD REPLACEMENT COVERS

 
The AHEAD drumsticks are designed to provide the ultimate in playing performance and come with the *NEW* Ultra Hard Cover. Although AHEAD sticks last longer than traditional wood sticks, they are not unbreakable. However, proper cover replacement will prolong the life of the sticks and provide unequalled feel and performance.

To replace AHEAD covers:

CAUTION - Adult Supervision Recommended and LT, ST, MT & SST Covers are NOT Interchangeable

1. Remove screw-on tip (see section I).
2. Remove used cover from stick. If the cover does not slip off easily, have an adult put it in an oven at no greater than 230 degrees fahrenheit and slide the cover off or carefully cut it off with a razor knife.
3. Be sure spacer ring is on the stick.
4. Heat the new cover in an oven, at no greater than 230 degrees fahrenheit, until it becomes pliable. A heat gun can also be used. Do not use a flame of any sort.
5. While cover is still hot, slip it over the stick (use a towel or mitten to prevent burn injury.) Hold cover with both hands then strike the butt end of the stick down on a hard surface to firmly seat the new cover.
6. Replace tip by screwing it back down until it is flush with replacement cover. Do not over tighten tip.

Watch for cover cuts and wear: The AHEAD replacement covers are designed to protect gear and sticks while providing ultimate performance. Cover life will vary from drummer to drummer, but they will last as long or longer than traditional wood sticks. And unlike wood sticks, the AHEAD's feel and flex will not diminish with prolonged play.

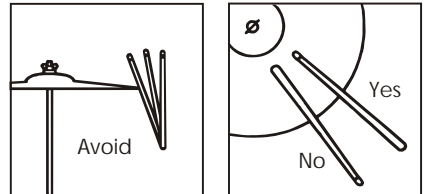

****Note:** Do not use handle on cymbals, rims or drumhead. This can void your warranty. Using factory recommended cymbal edges and attack angles will extend the life span of covers and your cymbals.

III. AHEAD GRIP TAPE

We recommend using AHEAD grip tape on all types of drumsticks. AHEAD grip tape lets the drummer put less energy into holding the sticks and more energy into playing. From a fatigue standpoint, this is much better for drummers' hands.

AHEAD COMMITMENT TO CUSTOMER SATISFACTION

AHEAD drumsticks are not unbreakable. AHEAD drumsticks have a much longer life span than traditional wood drumsticks. AHEAD warrants its drumstick core against defects in material and workmanship for a period of sixty (60) days from the date of purchase, subject to the following:

1. Warranty is not applicable to tips, covers or grip tape which are replaceable.
2. Warranty does not apply to sticks damaged by use of worn-out covers or dents in the handle. The user must replace covers when they show through-cuts. *Chips or dents in core shaft will reduce the stick life up to 75%.*
3. Warranty is not applicable to misuse and does not apply if any alterations have been made.
4. For all warranty claims purchased in the USA and Canada, the defective product must be sent with a copy of the sales receipt, post paid to:

AHEAD Drumsticks
c/o Big Bang Distribution
9420 Reseda Blvd., PMB 350
Northridge, CA 91324

For AHEAD drumsticks purchased outside of the USA and Canada, please refer to your local distributor. Do not send extra covers or original packaging (send both sticks only.) Allow up to 2-4 weeks for shipping and handling.

5. Because AHEAD cannot control usage of this product. AHEAD's sole responsibility will be replacement of defective merchandise. AHEAD will not be responsible for damage to person or equipment due to the use of this product.

WARRANTY RETURN FORM

Name: _____

Address: _____

Daytime telephone: () _____

Date purchased: _____ Where: _____

Describe the problem: _____

Length of time used: _____

How many wood sticks would you have used? _____

How often do you play (hours per week?) _____

Are there chips in the core shaft? _____ Patent #5179237

Questions? Call us at 800-547-6401 or visit our website at www.bigbangdist.com



Remember, AHEAD Drumsticks can be recycled!